












Washing instructions

Wash wisely



You can download the App from Apple Store, Google Play or Huawei AppGallery

Using the App

-  Download and open the Washstation App in your smart phone and create an account
 -  You have the option to reserve a washer for 10 mins from anywhere
 -  Choose washer or dryer
 -  Option to add another machine (Yes/No)
 -  Select cycle
 -  Proceed with payment
- ### Using the machines
-  Load machine with washing and close door – Max 3/4 full
 -  If you are washing, add your detergent
 -  Press start on the machine
 -  You'll receive an email to notify you that the cycle is ending
 -  Cycle finish (Wait 30 secs and unload)

Laundry top tips

- Do not overfill washing machine, $\frac{3}{4}$ full is maximum capacity, check door seal and in drum to make sure everything is clear

Beware of overfilling

- Water will not drain away
- Clothes will not spin dry properly in washer
- Clothes will be too wet to dry properly in dryer
- Door will not unlock as water needs to drain away
- Clothes will be jammed inside
- It will damage the machine, risking delays and poor wash quality



 
- Check all pockets before wash for all foreign objects



- Do not use colour catchers



- Select the best wash and drying programme
See washing and drying cycle guides for details



- Clean out lint filter before you use dryer



Scan here for Espanol, Francais, Cymreig, 中文 version

Washstation Helpline 0800 141 2331
service@washstation.co.uk